Example: Multiplier panel scored

- The panel design should always be checked with your assembly partner, pay attention to fiducial marks and mounting holes!
- Minimum space between tracks / copper and scoring edge: 500µm!
- Spacing between the single boards: 0.0mm!
- Define outlines with 0.01mm or 1mil!
- We suggest a frame of 5 - 10mm for better handling!

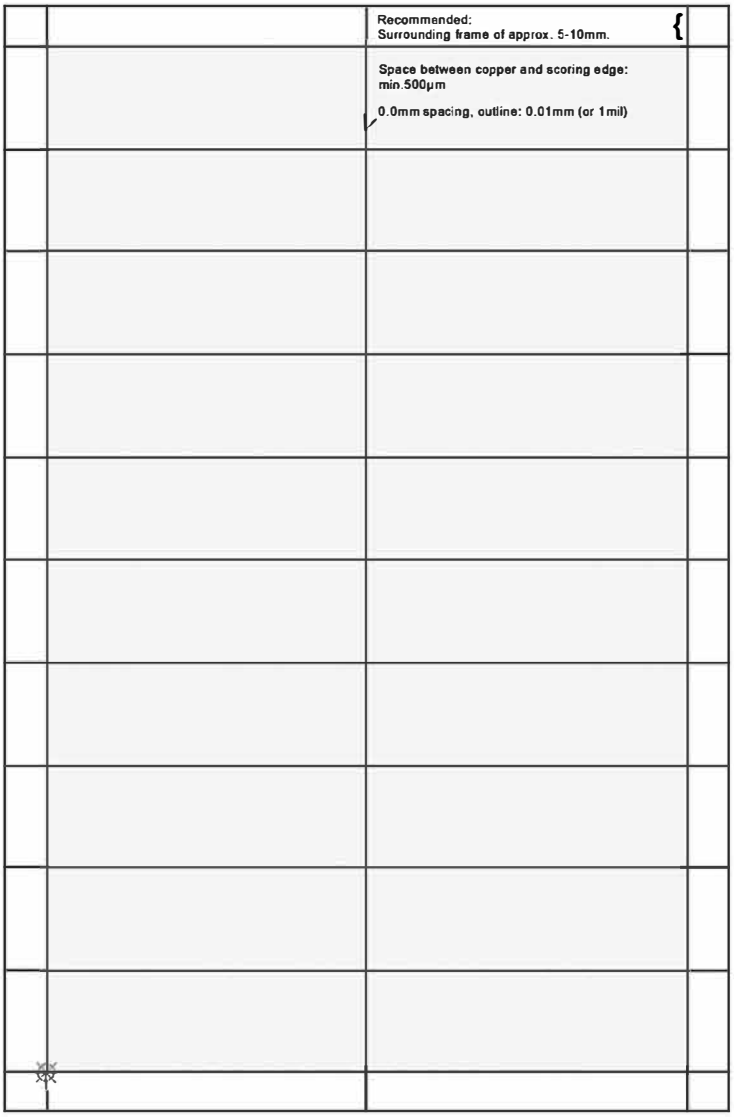

Example: Multiplier panel scored © 2011 Multi Circuit Boards Ltd. - www.multi-circuit-boards.eu